

# NoiseAtWork V2026

## Installation manual

Note: V2026 and V2024 use a new licensing method that does not need online access for activation and deactivation. A license for V2026 can also be used for V2024 but not for V2023 or earlier versions

for the installation of V2023 and earlier versions see:

[https://download.dgmrsoftware.nl/software/NAW/NAW2023\\_Installation\\_Manual.pdf](https://download.dgmrsoftware.nl/software/NAW/NAW2023_Installation_Manual.pdf)

## Content

1. System requirements	3
2. License types	4
3. Installation procedure	5
3.1 Uninstalling NoiseAtWork	6

## 1. System requirements

The minimum system requirements for using NoiseAtWork are:

- Operating system: Windows 10/11
- 30 Mb free disk space for project file (\*.naw)
- Printer: MS Windows compatible printer

## 2. License types

NoiseAtWork is available in four types of licenses: Workstation license, Site license, Company license and Enterprise license.

### Workstation license

A workstation license allows the use of the software on one dedicated PC and by 1 named person only.

### Site license

A site license allows the simultaneous use of the software on all computers of the company located at one specific office location.

### Company license

A company license allows the simultaneous use of the software on all computers of the company within one country.

### Enterprise license

An enterprise license allows the simultaneous use of the software on all computers of the company and its affiliates worldwide.

### *Demo mode*

In case of no valid license, the software will run in Demo mode. This means that it can be used to evaluate the software before purchasing a license. In demo mode only the integrated demo project can be viewed and modified.

For more information on the allowed use and other license conditions see the End User License Agreement (EULA). After installation of the software the file EULA.PDF is available in the installation folder.

### Renewal of licenses

All licenses are 1, 2 or 3-year rental licenses and will be valid only during the rental period. The current licensed period is shown in the lower right corner of the software interface and in the menu option 'Help | Info'. There is no auto renewal option for renewing licenses. This means that the Customer must purchase a new rental license at the end of the current rental period before the license expires. New rental licenses can be purchased in the web shop. For requesting a quote it is recommended to use the 'Help | Request Quote' menu option in the NoiseAtWork software.

For price information and link to the web shop see:

<https://dgmsoftware.com/products/noiseatwork/price-information-naw/>

### 3. Installation procedure

After the purchase of a license in the web shop you will receive an email from DGMR with installation instructions, a download link of the setup program and a valid license file 'dgmr.licx'.

Note 1: the installation of NoiseAtWork and the license file has to be executed by a user with sufficient user rights (for instance an administrator).

Note 2: The license file 'dgmr.licx' will work for version V2024 and higher. In case V2024 is already installed it is therefore not required to install V2026. In that case 'STEP 1: Installation of the software' can be skipped. It is however recommended always to install the latest version.

STEP 1: Installation of the software:

1. download the setup program and save it on your local hard drive or desktop
2. start the setup program
3. select the desired language in which the software will be installed
4. to continue installing, the End User License Agreement (EULA) has to be accepted
5. check if the installation folder is correct. If not, it can be changed here.

STEP 2: Installation of the license file 'dgmr.licx':

Option 1 - Recommended: In installation folder

1. Save the license file that is attached to the email on your desktop first.
2. Copy and paste, using CRTL-C (do not use Cut or CTRL-X) and CTRL-V, the license file from your desktop into the NoiseAtWork installation folder. e.g. 'C:\Program Files\DGMR\NoiseAtWork V2026' or 'C:\Program Files\DGMR\NoiseAtWork V2024'

Option 2 - Alternative: In a shared folder as defined in the license.cfg file

1. Save the license file that is attached to the email on your desktop first.
2. Copy and paste, using CRTL-C (do not use Cut or CTRL-X) and CTRL-V, the license file from your desktop into a shared folder.  
E.g. '\\DCDH3\Progs\AppsData\Licenties\' or 'P:\data\Licenses\'
3. The path to the shared folder location should be entered in the text file 'license.cfg' and should be stored in the installation folder. e.g. 'C:\Program Files\DGMR\NoiseAtWork V2026\license.cfg'. When starting NoiseAtWork the license.cfg file is read and NoiseAtWork will expect a valid dgmr.licx license file in the shared folder.

An example of a license.cfg file is given below:

[Location]

Path=\\DCDH3\Progs\AppsData\Licenties\

The installation as described above can be repeated on, or deployed to, all allowed PC's according to the purchased license.

### 3.1 Uninstalling NoiseAtWork

NoiseAtWork can be uninstalled by opening the Windows control panel and starting “Programs and features” on the workstation or server on which it is installed.